



Ziza® Interior Lighting Package Installation Procedures



Part Number [ES2539466](#)

for

BMW E82

1 Series Coupe

non premium package

(2008+)

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.

Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

LED Installation Instructions

Interior Lighting Kit for BMW E82 (1 Series coupe) non premium
ES2539466



Ziza®
performance automotive lighting

Tools

- T20 Torx driver
- Small flat head screwdriver
- Trim removal tool – ES517779 (Kit)

Kit Contents

- 8-chip wedge base white LED (qty 4)
- 36mm white LED festoon (qty 1)
- 42mm white LED festoon (qty 1)

This tutorial explains how to install the LEDs in your Ziza Interior Lighting Kit.



Make the job easier and prevent damage to headliners and other interior trim with **ECS Tuning Trim and Molding Removal Tool Sets: [ES2500877](#) and [ES517779](#).**

Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

What are LEDs?

LEDs are Light Emitting Diodes, solid state devices that emit light when connected to electrical current. They have no moving parts or wire filaments to burn out. They emit a whiter light, run cooler, and last longer than the incandescent (filament style bulbs) we are replacing in this tutorial.

Unlike filament bulbs, LEDs are polarity sensitive. They have plus and minus (positive and negative) electrical terminals that must match the polarity of the applied voltage. Installing the bulbs “backwards” in the light bulb sockets (with reversed polarity) will not harm them, but they will not light. Flipping the bulb 180 degrees in the electrical connector cures this problem.

Bulb Types


This kit includes two bulb types, classified by their general shape.

FESTOON - Conventional incandescent **festoon** bulbs have a shape and general appearance that is similar to a glass fuse.

Metal caps attached to both ends of a glass tube are sealed to the tube and attached to the bulb filament. End caps mount the bulb in its holder and also conduct electrical current.

LED festoon lights have the same pointed end caps, but are attached to a bank of LEDs instead of a filament tube.


festoon

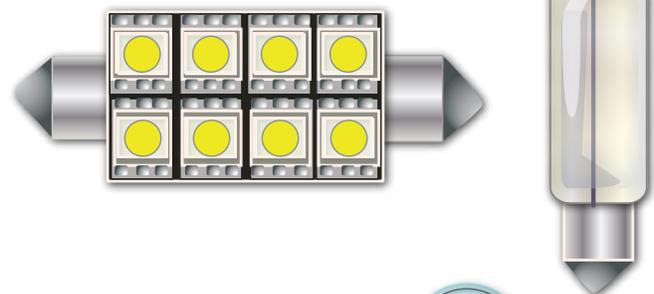

WEDGE - Wedge style bulbs get their name from the shape of the bulb base. The tapered end of the bulb “wedges” into the bulb socket.

LED wedge lights fit the bulb socket like a filament bulb, but are commonly polarity sensitive.

8-chip wedge

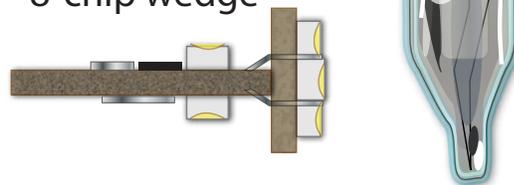

Ziza Interior Lighting Package Installation

ES2539466




Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Ziza Interior Lighting Kit BMW E82 (1 Series Coupe)

Make__BMW_____

Model __E82__non Premium Lighting Kit_____

Part Number__ES2539466_____

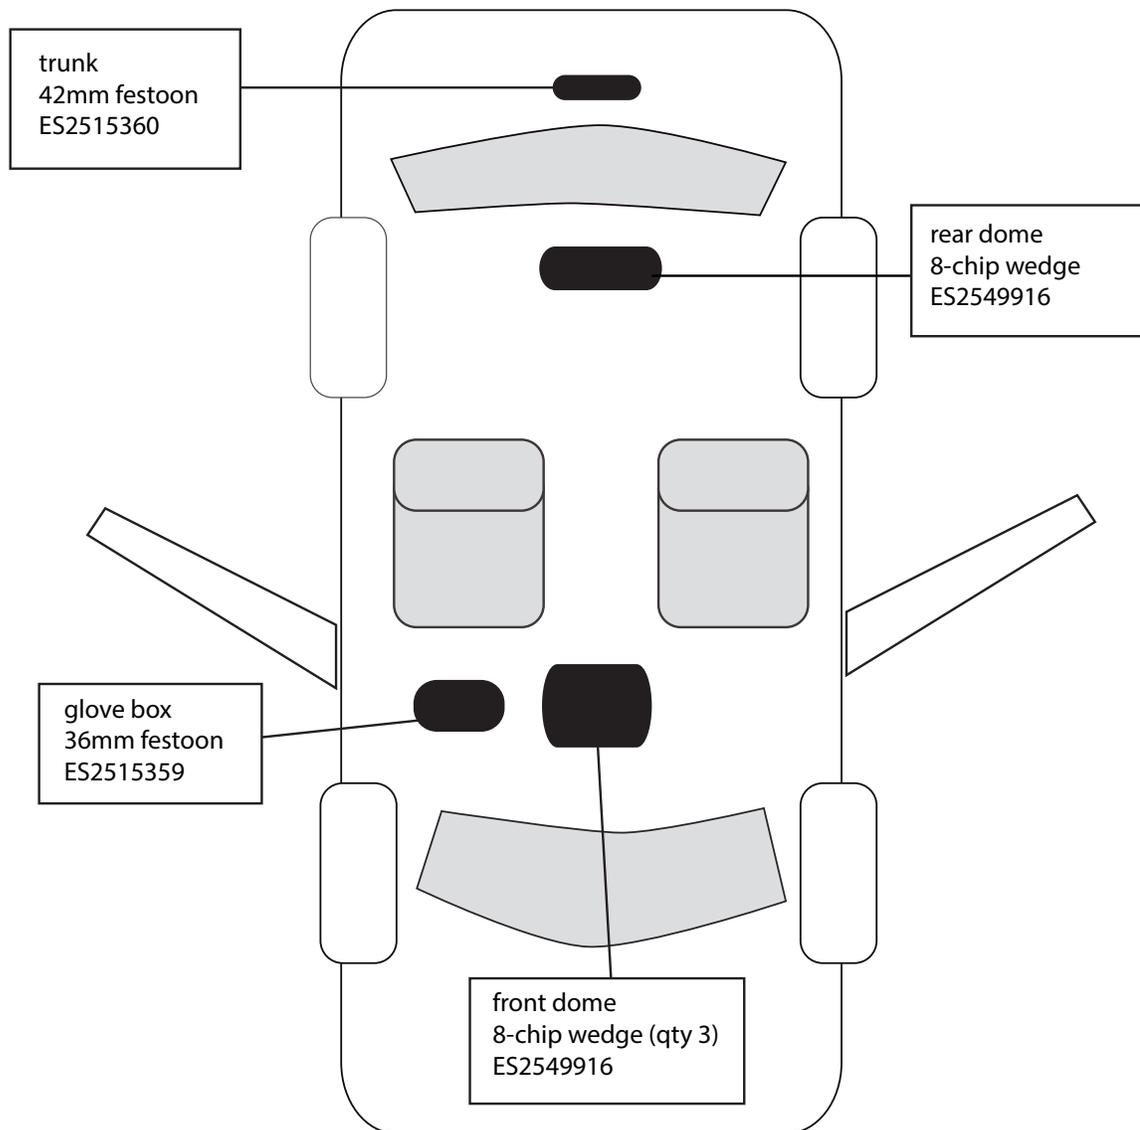

Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Front Dome Light LED Installation



Front Dome - Step 1

Pull the sun visors from their retainer clips and swing them to each side, out of the way.



Front Dome - Step 2

Pry back the cosmetic screw flap on the sun visor retainer clip with a small pick or screwdriver. Unscrew and remove both left and right sun visor clips using a T20 Torx® driver.



Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Front Dome - Step 3


Pull the front of the headliner downward gently, just far enough that you can slide your fingers up behind the light console, and push in on the metal retainer clips on the front of the console.



Front Dome - Step 4

To help you better imagine what you are pressing against with your fingers, here's a shot of the metal clips on the front of the overhead dome light console.

Both spring clips must be compressed to release the console from the headliner.

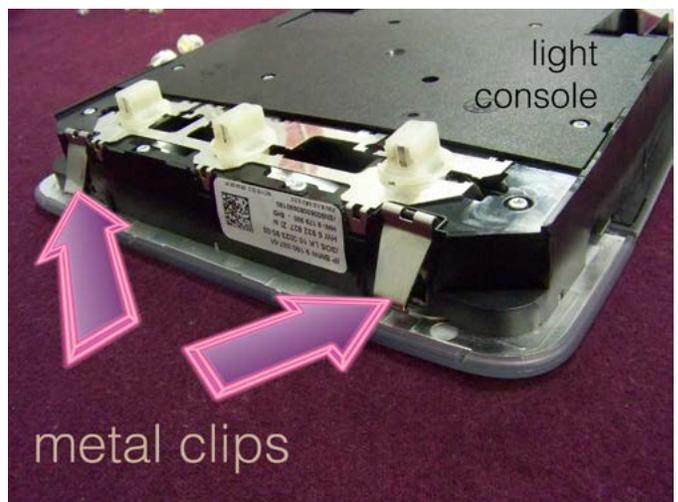

Front Dome - Step 5

When the spring clips are compressed, pull the front of the console down and slightly forward until it drops from the headliner completely.



Ziza Interior Lighting Package Installation

ES2539466




Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Front Dome - Step 6


Remove the bulb holders from the front dome light console. Twist each white plastic holder a quarter turn, then pull it out of its hole.

Note: We removed the console from the car for photos; you can leave the console connected to the wiring and replace the bulbs while the console is still installed in the car.

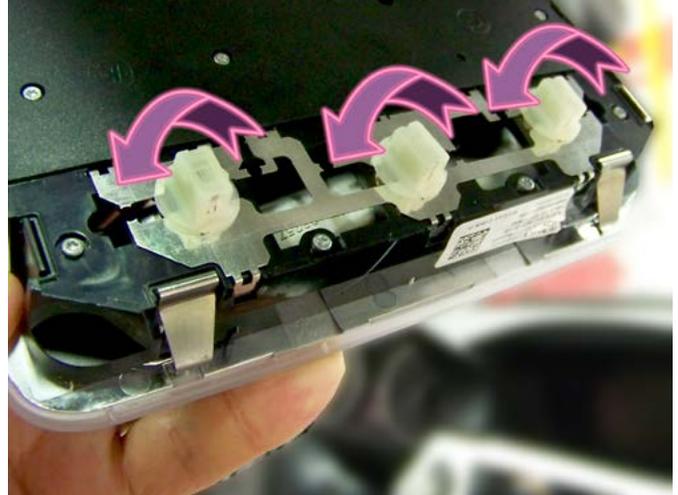

Front Dome - Step 7


Pull the old wedge bulb from each of the three dome light holders and insert a new LED array in its place.

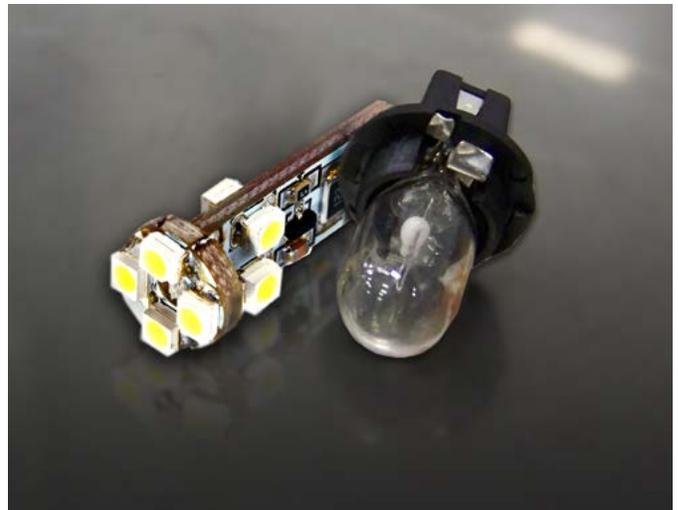

Front Dome - Step 8

Reinsert the LED and holder into each hole. Align the external tabs on the bulb holder with the mating notches in each bulb socket.

With the bulb holder fully inserted in the hole, turn each bulb holder a quarter turn to lock it in place.

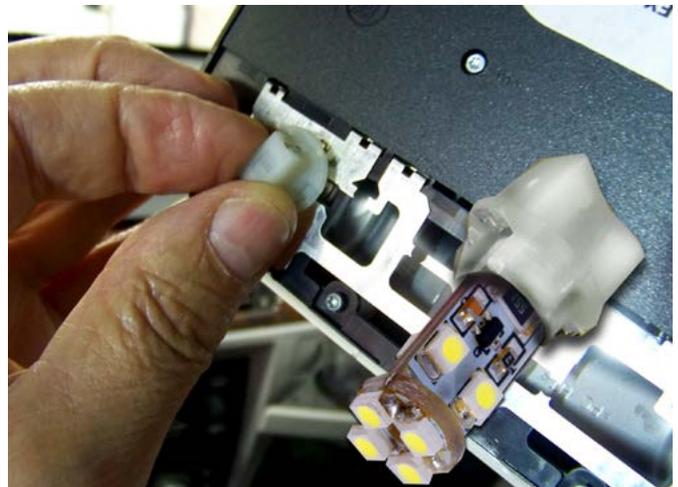

Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Front Dome - Step 9

Test all three lights. If any do not work, the bulb polarity is reversed.

If a light does not work:


- Remove the bulb holder again.
- Rotate it 180 degrees.
- Reinstall it and test again.



Front Dome - Step 10

When all bulbs are tested and working, reinstall the dome light console in the headliner.

- Push the rear of the console up into the headliner opening until the plastic tabs at the rear of the console engage the edge of headliner (1).
- Then push the front of the console upward until the metal clips snap in place (2).

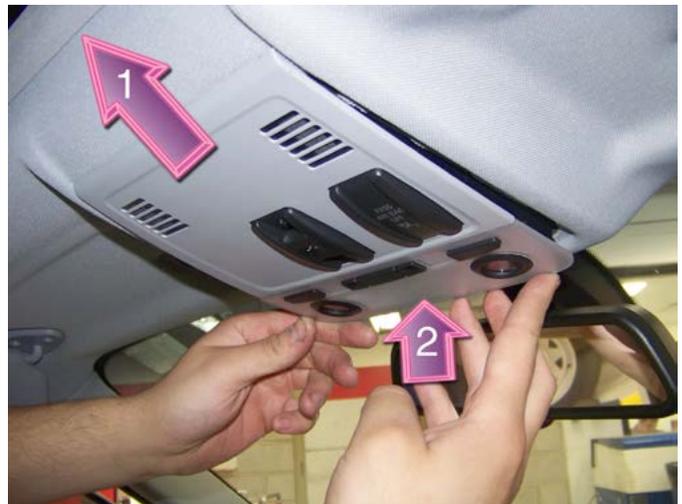

Front Dome - Step 11

Reinstall the sun visor clips, and reattach the sun visors.



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Rear Dome Light LED Installation



Rear Dome - Step 1

Reach up with both hands, and grip the back edge of the rear dome light console with your fingertips.

Push the edge of the console **forward**, toward the front of the car. Then pull downward when the console clips release from the headliner.

Drop the light console down.



Rear Dome - Step 2

The rear dome light uses the same wedge style bulbs we just replaced in the front dome lights.

Twist the bulb holder a quarter turn. Remove it. Replace the old filament bulb with a new LED and reinstall the bulb holder.

Test the light. If it doesn't work, remove the bulb holder, rotate 180 degrees, and reinstall it.



Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Rear Dome - Step 3

Reinstall the rear dome light cover.

Insert the rear edge of the cover into the headliner hole so the plastic tabs on the cover engage the lip of the headliner.

Raise the front of the dome light cover until the front metal clips (arrows) snap in place to secure the cover.



Glove Box Light LED Installation



Glove Box Light - Step 1

Open the glove box door.

Using a soft plastic pry tool or the edge of your thumb or finger, pry down the right side of the glove box light assembly (the side away from the push switch).



Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Glove Box Light - Step 2

The factory glove box bulb is an incandescent festoon bulb. The bent wire spring clip that holds it in place doubles as the electrical current path.

Pop out the old bulb, and replace it with a festoon LED.



Glove Box Light - Step 3

Install the LED array so the individual LEDs face toward the lens. As with the wedge style bulbs, the festoon LED array is polarity sensitive.

If it does not light when installed, remove it and turn it end-for-end.



Glove Box Light - Step 4

Insert the left side of the glove box light into the opening as shown. then rotate the lens upward until it snaps in place.

Note the location of the push pin actuator for the light switch. Check its alignment and operation to complete the LED glove box light installation.



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Trunk Light LED Installation



Trunk Light - Step 1

Open the trunk. Reach in and pry down on the right side of the light assembly to release it.

Tilt it downward far enough to replace the old bulb with the new LED.

(We disconnected and removed the entire assembly for photos. You may find that approach easier, as well.)



Trunk Light - Step 2

Remove the thin metal shield to expose the bulb.



Ziza Interior Lighting Package Installation

ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

Trunk Light - Step 3


Pry up on the old festoon bulb to release and remove it.



Trunk Light - Step 4

Install the new bulb with the LED array facing the lens. The solder connections on the back of the LED array will face upward, as shown.

Reinstall the protective shield.

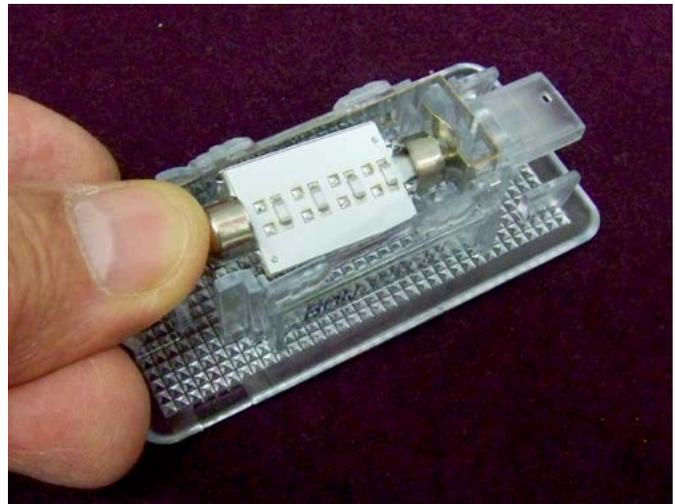

Trunk Light - Step 5

Install the bulb assembly. (Reconnect the wiring if necessary.)

Insert the left side of the bulb assembly into the opening in the parcel shelf until the tabs engage the lip of the hole. Tip the right side of the light assembly upward until it snaps in place.



This concludes the E82 Ziza LED installation.

Ziza Interior Lighting Package Installation
ES2539466



Fits BMW E82 (1 Series coupe) without Premium Lighting Package

This concludes the installation of the Ziza Interior Light Kit.



Make the job easier and prevent damage to headliners and other interior trim with **ECS Tuning Trim and Molding Removal Tool Sets: [ES2500877](#) and [ES517779](#).**